

WASH BEFORE USING



Operating Instructions Consignes d'utilisation Instrucciones de manejo

en: Open front snap and lift lid

fr: Ouvrez l'avant instantané et lever le couvercle

es: Abra el frente rápido y levante la tapa




1

2

en: Open cutlery compartment

fr: Ouvrez le compartiment de couverts

es: Abra el compartimiento de la cuchillería

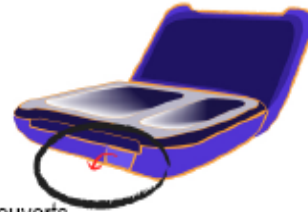

en: Enjoy your meal!

fr: Bon appétit !

es: ¡Disfrute de su comida!



3

4

en: Put cutlery back in compartment

fr: Remettez les couverts dans le compartiment


es: Ponga la cuchillería detrás en el compartimiento



en: Remove tray, place whole unit in dishwasher

fr: Enlevez le plateau, placez l'unité entière dans le lave-vaisselle

es: Quite la bandeja, ponga la unidad entera en lavaplatos

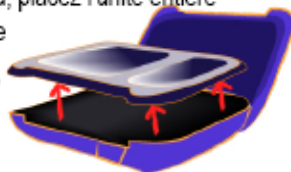

5

6

en: Repeat!

fr: Répétez !

es: ¡Repetición!



For more hints, tips and tricks on using your ThermaPod Mini, please visit
Pour plus de conseils, tuyaux et renseignements pour utiliser votre ThermaPod Mini svp visitez
Para más indirectas, inclina y trampea en usar su ThermaPod Mini, visitan por favor

www.ThermaPod.ca

THERMAGEL - HOT & COLD GELPACK WARNING: DO ***NOT*** HEAT FOR MORE THAN 10 seconds in microwave! Please be careful as overheating can cause it to burst. Can be heated in boiled water.

PLEASE NOTE: IF BRAND NEW PRODUCT IS STIFF AND/OR HARD TO OPEN OR CLOSE OR IS SLIGHTLY SQUEEKY, IT WILL LOSEN UP AFTER ONE OR TWO USES AND WASHES

MICROWAVE SAFE: PLEASE OPEN LID SLIGHTLY WHILE MICROWAVING. HEAT GELPACK SEPERATELY.

DISHWASHER SAFE: SEPARATE WHITE FOOD TRAY FOR OPTIMAL WASHING

FREEZER SAFE: IF PRODUCT IS STIFF AFTER FREEZING, RINSE UNDER WARM WATER

FRESHER, LONGER: FOOD WILL STAY FRESHER/COOLER/WARMER LONGER IN THE POD THAN REGULAR FOOD CONTAINERS, HOWEVER, FOR OPTIMAL FRESHNESS & TEMPERATURE USE IN JUNCTION WITH NEOPRENE COOLER BAG AND HOT/COLD GEL PACKS. THERE IS NO GUARANTEE HOW LONG FOOD WILL STAY PRESERVED. PLEASE USE JUDGEMENT

HAVE A HAPPY MEAL... FROM THE THERMAPOD TEAM!